

HIGH-QUALITY MOTOR

MODELO:- BON-P-GE-7.0HP

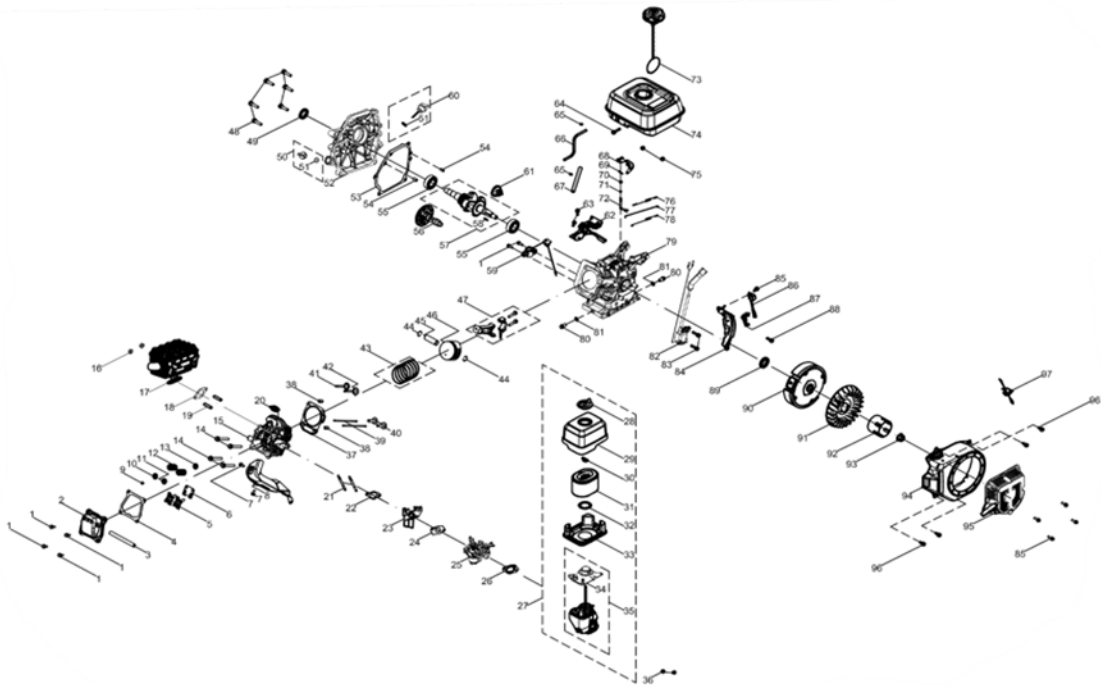


IMAGEN	BOHNOEFFER CODIGO	DESCRIPCION EN ESPANOL	DESCRIPTION IN ENGLISH
1	BONGE-7.0HP-1	Perno, M6 x 16	Bolt, M6x16
2	BONGE-7.0HP-2	Tapa de la válvula	Valve Cover
3	BONGE-7.0HP-3	Manguera de respiradero	Breather Hose
4	BONGE-7.0HP-4	Junta, tapa de válvula	Gasket, Valve Cover
5	BONGE-7.0HP-5	Conjunto de balancines	Rocker Arm Assembly
6	BONGE-7.0HP-6	Base del balancín	Rocker Arm Base
7	BONGE-7.0HP-7	Perno, M6 x 10	Bolt, M6x10
8	BONGE-7.0HP-8	Sudario	Shroud

9	BONGE-7.0HP-9	Tapa de ajuste de válvula, escape	Valve Adjust Cap, Exhaust
10	BONGE-7.0HP-10	Asiento de resorte de válvula	Valve Spring Seat
11	BONGE-7.0HP-11	Asiento de resorte de válvula	Valve Spring Seat
12	BONGE-7.0HP-12	Resorte de válvula	Valve Spring
13	BONGE-7.0HP-13	Sello de la válvula de admisión	Intake Valve Seal
14	BONGE-7.0HP-14	Perno, M8 × 65	Bolt, M8×65
15	BONGE-7.0HP-15	Cabeza de cilindro	Cylinder Head
16	BONGE-7.0HP-16	Tuerca, M8	Nut, M8
17	BONGE-7.0HP-17	Silenciador	Muffler
18	BONGE-7.0HP-18	Junta, silenciador	Gasket, Muffler
19	BONGE-7.0HP-19	Espárrago, M8 × 34	Stud, M8×34
20	BONGE-7.0HP-20	Bujía	Spark Plug
21	BONGE-7.0HP-21	Espárrago, M6 × 110	Stud, M6×110
22	BONGE-7.0HP-22	Junta, aislante del carburador	Gasket, Carburetor Insulator
23	BONGE-7.0HP-23	Aislante	Insulator
24	BONGE-7.0HP-24	Junta, carburador	Gasket, Carburetor
25	BONGE-7.0HP-25	Carburador	Carburetor
26	BONGE-7.0HP-26	Junta, carburador	Gasket, Carburetor
27	BONGE-7.0HP-27	Depurador completo	Air Filter Assembly
28	BONGE-7.0HP-28	Cubierta del filtro de aire	Air Filter Cover
29	BONGE-7.0HP-29	Cubierta del filtro de aire	Air Filter Cover
30	BONGE-7.0HP-30	Tuerca de mariposa	Butterfly Nut
31	BONGE-7.0HP-31	Elemento de filtro de aire	Air Filter Element
32	BONGE-7.0HP-32	Junta, filtro de aire	Gasket, Air Filter
33	BONGE-7.0HP-33	Cubierta inferior del filtro de aire	Air Filter Lower Cover
34	BONGE-7.0HP-34	Hoja del silenciador	Muffler Sheet
35	BONGE-7.0HP-35	Conjunto de la base del filtro de aire	Air Filter Base Assembly
36	BONGE-7.0HP-36	Tuerca, M6	Nut, M6
37	BONGE-7.0HP-37	Culata Junta	Gasket, Cylinder Head
38	BONGE-7.0HP-38	Pin, $\phi 10 \times 16$	Pin, $\phi 10 \times 16$
39	BONGE-7.0HP-39	Varilla de empuje	Push Rod
40	BONGE-7.0HP-40	Alzaválvulas	Tappet
41	BONGE-7.0HP-41	Válvula de escape	Exhaust Valve
42	BONGE-7.0HP-42	Válvula de admisión	Intake Valve
43	BONGE-7.0HP-43	Juego de anillos de pistón	Piston Ring Set
44	BONGE-7.0HP-44	Anillo de seguridad	Circlip
45	BONGE-7.0HP-45	Pasador del pistón	Piston Pin
46	BONGE-7.0HP-46	Pistón	Piston
47	BONGE-7.0HP-47	Ensamblaje de biela	Connecting Rod Assembly
48	BONGE-7.0HP-48	Perno, M8 × 32	Bolt, M8×32
49	BONGE-7.0HP-49	Sello de aceite, $\phi 25 \times \phi 41.25 \times 6$	Oil Seal, $\phi 25 \times \phi 41.25 \times 6$
50	BONGE-7.0HP-50	Tapón de aceite	Oil Plug
51	BONGE-7.0HP-51	Junta tórica, $\phi 15,8 \times 2,5$	O-Ring, $\phi 15.8 \times 2.5$
52	BONGE-7.0HP-52	Tapa del cárter	Crankcase Cover
53	BONGE-7.0HP-53	Junta, cárter	Gasket, Crankcase
54	BONGE-7.0HP-54	Pin, $\phi 8 \times 14$	Pin, $\phi 8 \times 14$
55	BONGE-7.0HP-55	Cojinete, 6205	Bearing, 6205
56	BONGE-7.0HP-56	Árbol de levas	Camshaft
57	BONGE-7.0HP-57	Cigüeñal	Crankshaft

58	BONGE-7.0HP-58	Llave Woodruff	Woodruff Key
59	BONGE-7.0HP-59	Sensor de aceite	Oil Sensor
60	BONGE-7.0HP-60	Varilla graduada	Dipstick
61	BONGE-7.0HP-61	Gobernador Gear	Governor Gear
62	BONGE-7.0HP-62	Conjunto de soporte de engranaje del gobernador	Governor Gear Bracket Assembly
63	BONGE-7.0HP-63	Perno, M6 x 12	Bolt, M6x12
64	BONGE-7.0HP-64	Perno, M6 x 28	Bolt, M6x28
65	BONGE-7.0HP-65	Abrazadera	Clamp
66	BONGE-7.0HP-66	Manguera de combustible	Fuel Hose
67	BONGE-7.0HP-67	Chaqueta de la manguera de combustible	Fuel Hose Jacket
68	BONGE-7.0HP-68	Palanca del gobernador	Governor Lever
69	BONGE-7.0HP-69	Pasador de chaveta	Cotter Pin
70	BONGE-7.0HP-70	Sello de aceite, $\phi 6 \times \phi 11 \times 4$	Oil Seal, $\phi 6 \times \phi 11 \times 4$
71	BONGE-7.0HP-71	Junta tórica, $\phi 5.2 \times 1.9$	O-Ring, $\phi 5.2 \times 1.9$
72	BONGE-7.0HP-72	Eje del engranaje del gobernador	Governor Gear Shaft
73	BONGE-7.0HP-73	Tapa del combustible	Fuel Cap
74	BONGE-7.0HP-74	Depósito de combustible	Fuel Tank
75	BONGE-7.0HP-75	Tuerca, M6	Nut, M6
76	BONGE-7.0HP-76	Resorte del gobernador	Governor Spring
77	BONGE-7.0HP-77	Varilla del acelerador	Throttle Linkage
78	BONGE-7.0HP-78	Resorte inactivo	Idle Spring
79	BONGE-7.0HP-79	Caja del cigüeñal	Crankcase
80	BONGE-7.0HP-80	Perno de tierra	Earth Bolt
81	BONGE-7.0HP-81	Arandela, $\phi 10 \times 1,5 \times \phi 16$	Washer, $\phi 10 \times 1.5 \times \phi 16$
82	BONGE-7.0HP-82	Módulo de ignición	Ignition Module
83	BONGE-7.0HP-83	Perno, M6 x 25	Bolt, M6x25
84	BONGE-7.0HP-84	Escudo inferior	Lower Shield
85	BONGE-7.0HP-85	Perno, M6 x 12	Bolt, M6x12
86	BONGE-7.0HP-86	Sensor de aceite	Oil Sensor
87	BONGE-7.0HP-87	Acortar	Clip
88	BONGE-7.0HP-88	Perno, M6 x 20	Bolt, M6x20
89	BONGE-7.0HP-89	Sello de aceite, $\phi 25 \times \phi 41.25 \times 6$	Oil Seal, $\phi 25 \times \phi 41.25 \times 6$
90	BONGE-7.0HP-90	Volante	Flywheel
91	BONGE-7.0HP-91	Ventilador	Cooling Fan
92	BONGE-7.0HP-92	Copa de inicio	Starter Cup
93	BONGE-7.0HP-93	Tuerca, M14 x 1,5	Nut, M14x1.5
94	BONGE-7.0HP-94	Cobertor del Ventilador	Shroud
95	BONGE-7.0HP-95	Arrancador de retroceso	Recoil Starter
96	BONGE-7.0HP-96	Perno, M6 x 14	Bolt, M6x14
97	BONGE-7.0HP-97	Interruptor de parada	Stop Switch